




Product Installation Update

Please distribute to all field reps for immediate dissemination to all customers of XPress™ fittings. Below please find an updated installation instruction procedure for large diameter XPress™ fittings (2 ½” – 4”).

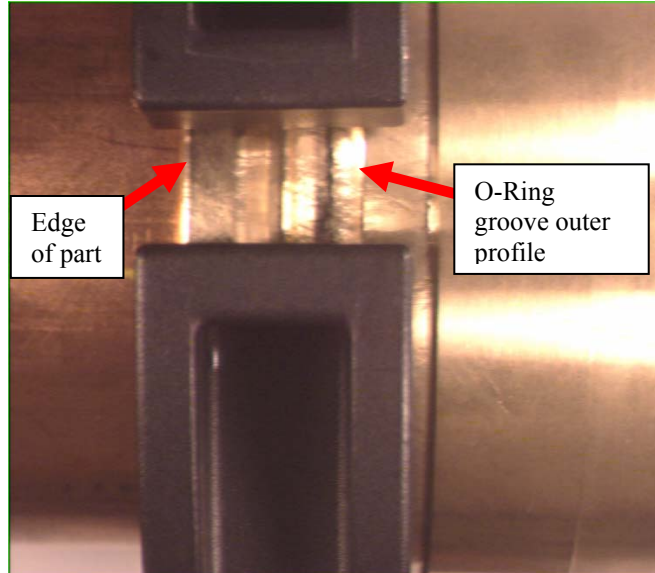

This shows the correct positioning of the clamp ring on the fitting. Note that the edge of the jaw is slightly over the edge of the part.

Please confirm that STEP #2 of the installation instructions are read and followed completely as stated, “Open the press ring and place at right angles onto the fitting. The raised center portion of the press ring must properly engage into the **forward** fitting groove. If the ring is properly inserted into the groove, the edge of the press ring will closely align with the end of the fitting. Recheck insertion depth before completing the pressing process.”

